


# Iodine Sanitizer Test Procedures



## Step #1

Remove a 1.5" strip of clean dry test paper from container below.

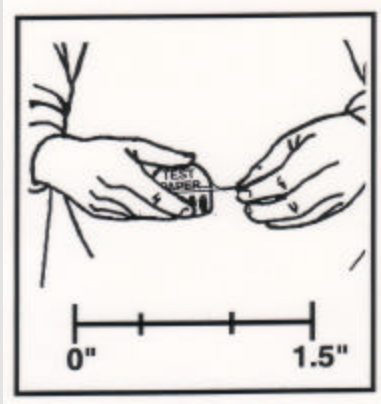

## Step #2

Dip strip of test paper in clean, fresh room temperature sanitizer solution. Hold in solution for time required on test paper. Do not shake test paper.



## Step #3

Compare to chart on test paper container immediately. Do not exceed or go below recommended limits ( see below).

### Iodine Concentration Range

Minimum limit **12.5 ppm**      Maximum limit **25 ppm**

An iodine solution shall have a:  
Minimum Wash temperature of 24 ° C (75 ° F)



For Service or Order:  
Hot Springs 501-623-7742  
Little Rock 501-372-6677